



NWCOMPACT

User Guide & Installation Handbook

Installing Your Cooker

Your New World Cooker Even if you have used an electric cooker before, it is important that you read these instructions thoroughly before starting to cook, paying particular attention to the installation and safety instructions.

Getting help If you have any problems with installing, operating, or cooking with your Compact Oven, please check through these instructions thoroughly to make sure that you have not missed anything. If you still need help, then please contact:

Aus Customer service details:
GLEN DIMPLEX GUARANTEE DEPARTMENT
GLEN DIMPLEX AUSTRALIA PTY LTD
REPLY PAID 84780
MOUNT WAVERLEY VIC3149
Telephone number: 1300 556 816

WARNING°

For your own safety, make sure that these instructions on installation, use and maintenance are followed.

We advise you to keep these instructions in a safe place for future reference. If you sell or transfer ownership of this product, please pass on these instructions to the new owner.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Unpacking After unpacking your cooker, make sure that you remove all the packing from the oven and grill compartment, and the packing from under the hob on radiant ring models, and any stickers from the oven door and the hob. Examine your cooker for any damage. If there is any damage to your cooker or anything is missing, please contact your supplier for advice.

Locating the cooker Your cooker must stand on a flat surface so that when it is in position the hob is level. Make sure that the cooker is stable and cannot be rocked.
If it is used between units, allow 10mm (3/8") clearance on each side. It must not be situated with either side closer than 150mm (6") to a wall or cupboard that is higher than the hob. Do not remove the cooker feet. Any overhanging surface or cooker hood should be at least 450mm (18") above the cooker hob. We do not recommend positioning the cooker below wall cupboards, as the heat and steam from the cooker may cause damage to the cupboards and its contents. Make sure that the walls near the cooker are resistant to heat, steam, and condensation.

Installing Your Cooker

Connecting the cooker

WARNING - THIS APPLIANCE MUST BE EARTHED

The Compact Oven is designed to operate from a 10 A socket outlet. If the cooker is not already fitted with a plug proceed as follows:

IMPORTANT:

The cooker must be connected to the supply by a properly earthed 3-pin plug (minimum capacity 10 Amp). If a BS1363 fused plug is used it should be fitted with a 10 Amp fuse ASTA or BSI approved to BS1362.

The wires in the mains lead are coloured in accordance with the following code:

Green and Yellow	Earth
Blue	Neutral
Brown	Live

As the colours of the wires in the mains lead of this appliance may not correspond with the markings identifying the terminals in your plug, proceed as follows:

1. The wire which is coloured green and yellow must be connected to the  terminal in the plug which is marked with the letter **E** or by the earth symbol or coloured green, or green and yellow.
2. The wire which is coloured blue must be connected to the terminal which is marked with the letter **N** or coloured black.
3. The wire which is coloured brown must be connected to the terminal which is marked with the letter **A** or coloured red.

If you are not sure how to connect your cooker please consult a Licenced electrician.

WARNING!

During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the oven.

The cooker may already be fitted with a non-rewirable plug. If this is not of the correct type for the sockets in your home it must be cut off and the correct type fitted. If it is cut off it must be disposed of safely. There is a danger of electric shock if it is inserted into a socket.

For Your Own Safety

When used properly your Compact oven is completely safe, but as with any electrical appliance there are some precautions you must take in its use.

Never ...

- allow anyone except an authorised Compact Service Agent to service or repair your cooker.
- remove any part of the cooker other than those intended in normal use, or attempt to modify the cooker in any way.
- allow young children to operate or play with the cooker.
- use a chip pan or deep fat fryer more than 1/3 full of oil, or use a lid while frying, and do not leave a fryer unattended while cooking.
- line the shelf, floor, or sides of the oven, or the radiant ring hob spillage tray with aluminium foil as overheating and damage may result.
- place anything which might catch fire, such as towels or tea towels, on the hob or elements, even when the cooker is not in use.
- use an asbestos mat, trivet or rack of any kind under pans on the hob.
- store anything which might catch fire in the oven.

Always ...

- take care when touching any part of the cooker which may be hot. Use oven gloves when removing or replacing food or dishes.
- stand back when opening the oven door to allow any build-up of heat or steam to disperse.
- keep the oven door closed when not in use to prevent accidents.
- make sure that the roof, floor, and shelf are fitted correctly before using the oven or grill.
- keep your cooker clean, as a build-up of grease or fat from cooking may be a fire hazard.
- switch off at the mains supply before cleaning your cooker.
- supervise children and pets, particularly when grilling, as exposed parts of the grill may become hot.
- use suitable pans for the hob, and make sure that they are stable.
- keep handles away from the edge of the hob and any heat. For added safety you should consider using a suitable hob guard.
- make sure that all the controls are switched off when you finish cooking.
- remember that your cooker may stay hot for a time even after you have finished cooking.

Before Cooking

Before you cook for the first time, we recommend that you switch on each element in turn to burn off any odours remaining from manufacture. Simply operate each hob element and the grill on maximum for a few minutes, and the oven for about 30 minutes.

Using the appliance

Heat plate operation

The different models of the appliance are equipped with 2 or 3 heat plates. The 1200 W heat plate (diameter 180 mm) and 1000 W (diameter 145 mm) are controlled by 7 position rotary step switch. The 450 W heat plate (diameter 80 mm) can be only opened (the indication light on the switch is on) or closed. The use of the 7 position rotary switch is simple: heating relative to the position of the switch

The heat plate diameter 180 mm can operate continuously only when the oven is not operating. When the oven switches on this heat plate automatically switches off even if the lamp indicator light will be lit. The heat plate will only operate again when the oven reaches the set temperature.

Operating the oven and the grill

The oven can be used in two ways: with the two resistances and as a grill (only the upper resistance). You can select the use of the oven by the rocker switch in the control panel.

To operate the oven (upper and lower resistance) select the position on the rocker switch and turn the thermostat to the desired temperature

50 – 250 the oven is working (the indication light is lit) at the selected temperature

To operate the grill (upper resistance)

- Select the lower position on the rocker switch
- Turn the thermostat at 250 C
- Preheat the oven for about 5 minutes
- Turn the thermostat back to position • when the grilling is finished.

In case the cooker is equipped with a timer select on the timer the desired cooking time or select the manual position (hand symbol). When the selected time has passed you will hear a bell ringing and the timer is switched off. Turn the thermostat at position • and the timer at position 0 (in case the timer is working manually).

ATTENTION: When you use the grill the door must remain closed.

Cleaning the appliance

Before cleaning the appliance remove the plug from the socket

- Cleaning is the only maintenance operation normally required. It must be carried out with the mini cooker disconnect. Use a liquid detergent, water and a cloth or sponge to clean it.
- Do not use chemical products or abrasive compounds to clean any part of the oven.
- For maintenance of the heat plates use one of the commercial products. To clean the oven, avoid using active foams too often.

Troubleshooting guide

If you read carefully the pages of this instruction manual you will probably not have any problems with your mini cooker. In case you need assistance , before calling to the service check if you have done everything according to the instruction manual.

In case the appliance isn't working please check

- If the power lead is connected to the supply socket

The company keeps the right to change the contents of the instruction manual in order to improve products.

Technical Data	Power supply	240v~50Hz
	Electrical load	240v
	Left hotplate	1.0kW
	Right hotplate	1.2kW
	Grill	1.0kW
	Oven	1.15kW
	Maximum load	2.2kW
	Dimensions	
	Packed	
	Height (mm)	395mm
	Width (mm)	620mm
	Depth (mm)	465mm
	Weight (kg)	19.8
	Product	
	Height (mm)	320mm
	Width (mm)	570mm
	Depth (mm)	385mm
	Weight (kg)	18.3

New World Customer Care

|||||
newworld[®]